



UniClik
Trimmerhead



UniClik trimmer head cleaning instructions

From time to time, your trimmer head will need a little cleaning. If you notice that your cutting lines are being thrown, it is possible that there could be dirt or grass around the jaws that need removing. While cleaning, take the time to check the jaws for any wear & tear. Replacement parts are available if required.

Cleaning the trimmer head:

1. Remove Head from Trimmer
2. Undo the 3 screws on the back of your UniClik head (torx T20 bit)
3. Remove the bottom plate.
4. Remove all parts from the housing in the following order:
First eyelets,
then springs,
then segments (jaws)
Note! Do not touch the jaws with metal
5. Clean parts with warm soapy water and put it back together in **reverse order**. Do not use any lubricants. Rotate the eyelets if they show wear.



Tips:

- Do not allow the cutting line to get too short,
- Store cutting line away from direct sun light (storing in water is helpful).
- Only use premium trimmer line, available online at our website or over the phone.
- Instructional videos are also available to view on our website.

Please don't hesitate to contact us, we are always happy to help.

EuroLux Australia P 1300 137 881 E info@trimmerhead.com.au

www.trimmerhead.com.au